

Examples

mode
Current date and real time input or change

Example: Date 01.02.2000; time 14:00 after Reset

O.K. 3x
◆ 1x

O.K. 2x

O.K. 1x
◆ 1x

O.K. 1x
◆ 4x

O.K. 3x

PR mode
Programming daily or weekly programme

Several possibilities:
1. Single day, one channel
2. Several days, one channel.
Example: Tuesday (2) and Thursday (4) to Sunday (7); Switching time 19:00; Channel A ON

Start from: AUTO mode

O.K. 1x
◆ 1x

O.K. 2x

O.K. 1x
◆ 1x

O.K. 4x
◆ 1x

O.K. 1x
◆ 9x

O.K. 3x
◆ 1x

O.K. 1x

Continue with input of further dates / functions or press key 1x to return to mode AUTO.

Red: Flashing symbol in display

PR mode Holiday programming
Start and End programming by date

Example: Start: 20.04
End: 24.04
Channel A OFF (permanent)

Start from: AUTO mode

O.K. 1x
◆ 1x

◀ 1x

◆ 2x

O.K. 3x
◆ 4x

O.K. 1x
◆ 2x

O.K. 1x
◆ 4x

O.K. 2x
◆ 4x

O.K. 1x
◆ 2x

O.K. 1x

Continue with input of further dates / functions or press key 1x to return to AUTO mode.

The holiday programme does not occupy a storage location.

By input a new holiday programme the old holiday programme is overwritten.

The holiday programme is cleared at the end of the holiday programme and the output relay goes into the state of the switching programme. (Programme review)

S/W mode
Deactivate automatic summertime changes (daylight saving)

The default setting on delivery, S/W time change is activated.

Initial form: AUTO mode

O.K. 4x
O.K. 1x

◆ 1x

O.K. 1x

The S/W -time change is deactivated

The time changeover is executed automatically according to the „European Regulation“.

Start: Last Sunday in March
End: Last Sunday in October.

? mode
Display or alter switching times

Example: Alter Tuesday and Thursday to Sunday 19:00;
Channel A ON
into : Wednesday to Sunday 19:30;
Channel A ON impulse 05 seconds

Start from: AUTO mode

O.K. 2x
O.K. 1x

O.K. 3x

◆ 1x

O.K. 1x
◆ 1x

O.K. 1x
◆ 1x

O.K. 7x
◆ 3x

O.K. 2x

◆ 2x

O.K. 2x
◆ 5x

O.K. 1x

Number of free storage locations available

Number of free storage locations available

? mode
Cancel function

Example: Cancelling holiday programme
Start: 20.04 End: 24.04

Start from: AUTO mode

O.K. 2x
O.K. 1x

O.K. 1x

CL 1x

◆ 1x

Number of free storage locations available

Number of free storage locations available

If CL key is pressed twice while free storage locations available are displayed, all inputs are cancelled. (Clear all)